



Remote Programming Procedure

Pursuit Remote Programming

1. Turn the ignition key to ON
2. Press and release the valet button 3x, system will beep 1x
3. Press the Lock button on each remote, system will beep 1x to confirm the remote is programmed
4. Turn the ignition key OFF

FlashLogic Remote Programming

1. Turn the ignition key to ON 5x within ten (10) seconds, system will flash parking lights 1x.
2. Press the Lock button on each remote, system will flash parking lights 1x to confirm the remote is programmed
3. Turn the ignition key OFF

For more information about remote operation, please download the Owners Guide at
www.adventproducts.com