

User Guide

Models: 2021+ Ford Transit (SEC-FTR-21)

Valet Mode

During initial transport the vehicles security system is placed into valet mode. When in valet mode, the red LED on the A-pillar mounted valet/LED will be solid red. To exit valet mode and activate the security system use the following steps.

1. Turn vehicle ignition ON
2. Press and hold down the button on the dash mounted LED
3. Release the button after 5-6 seconds
4. The LED should now be off
5. Turn vehicle ignition OFF



Arming/Disarming Alarm

- Arm the system by pressing Lock 1X on the OEM remote
 - The system will fully arm in 30 seconds as long as all vehicle doors are closed
- If the system emits extra chirps after arming; check and make sure all doors are closed
 - Once all doors are closed the system will arm shortly after
- Disarm the system by pressing Unlock 1X on the OEM remote
- If the system has been triggered and you need to disarm and rearm it
 - Press Unlock to disarm the system, then press Lock 1X to rearm the system
 - The system will fully rearm in 30 seconds


Shock/Impact Sensor

The shock sensor is preset at time of installation. However, if you find that the sensor is sensitive to loud noises and vibration then it may be adjusted.

- Locate the impact sensor behind/beneath the vehicle dash.
 - Turn the white dial (potentiometer) on the side of the sensor counter-clockwise to make it less sensitive
- Note:** Make small adjustments
- Close all vehicle doors and arm the alarm
 - After 30 seconds; test the sensor by hitting the driver side door frame or window with your palm or the butt of your hand with a closed fist. Continue to adjust the sensor until you find a "sweet spot" for it.



Dial

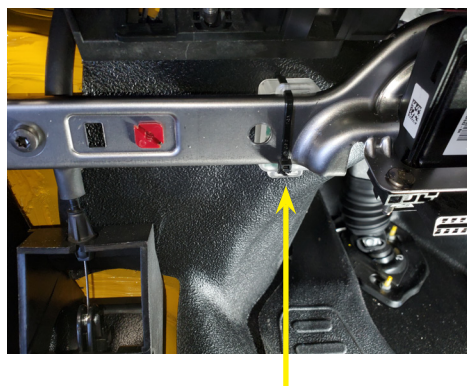

Sensor Placement - Behind dash (left of OBD-II)