


User Guide

Models: *2024+ Ford F-150 (RSE-FTRK-24)*
2023+ Ford Super Duty (RSE-FSD-23)
2025+ Ford Ranger (RSE-FRNG-24)

Valet Mode

During initial transport the vehicles security system is placed into valet mode. When in valet mode, the blue LED on the windshield mounted "control center" will be solid blue. To exit valet mode and activate the security system use the following steps.

1. Turn vehicle ignition ON
2. Turn vehicle ignition OFF
3. Immediately press button on "control center"

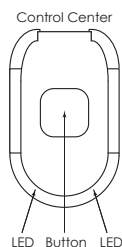

Arming/Disarming Alarm

- Arm the system by pressing Lock 2X on the OEM remote
 - The system will fully arm in 30 seconds as long as all vehicle doors are closed
- If the system emits extra chirps after arming; check and make sure all doors are closed
 - Once all doors are closed the system will arm shortly after
- Disarm the system by pressing Unlock 1X on the OEM remote
- If the system has been triggered and you need to disarm and rearm it
 - Press Unlock to disarm the system, then press Lock 2X to rearm the system
 - The system will fully rearm in 30 seconds

Activating Remote Start

- Pressing Lock, Lock, Lock on the OEM remote will activate remote start
- The vehicle's parking lights will turn on once the vehicle is running
- The alarm's shock sensor will deactivate under remote start to prevent false alarms

Vehicle Takeover under Remote Start

1. Unlock the vehicle
2. Enter the vehicle
3. Turn the vehicle's ignition ON with a key or press PTS button once.
4. Press Brake Pedal
5. The vehicle has now taken over and may be driven

Failure to Start or Shutdown


- The vehicle has a limit of only 1 remote start per ignition cycle
- Vehicle must be locked and armed for at least 45 seconds before remote starting.
- The remote start system will fail to start in the following conditions:
 - » The ignition is on
 - » The alarm system is triggered
 - » The doors/hood are open
 - » The transmission is not in Park (P)
 - » The vehicle battery voltage is too low
 - » The service engine light is on
- The remote start will shutdown in the following conditions
 - » Any truck door or truck bed topper door (if equipped) is opened.
 - » If the brake pedal is pressed before turning ignition on
 - » Lock, Lock, Lock is pressed on the OEM remote while vehicle is running

User Guide

Shock/Impact Sensor

The shock sensor is preset at time of installation. However, if you find that the sensor is sensitive to loud noises and vibration then it may be adjusted.

- Locate the impact sensor behind/beneath the vehicle dash.
- Insert a small screwdriver into the side of the sensor and adjust the dial (potentiometer) counter-clockwise to make it less sensitive.
Note: Make small adjustments.
- Close all vehicle doors and arm the alarm.
- After 30 seconds; test the sensor by hitting the driver side door frame or window with your palm or the butt of your hand with a closed fist. Continue to adjust the sensor until you find a "sweet spot" for it.

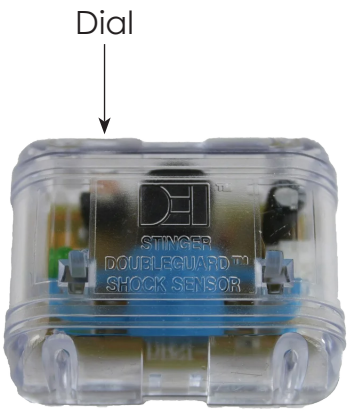


Ford Ranger



Sensor Placement -
Behind Dash near Fire Wall

Ford F-150

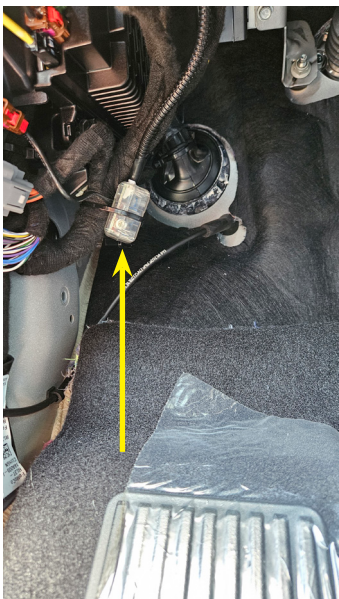

Sensor Placement -
Driver Kick Panel Area

Ford Super Duty



Sensor Placement -
Driver Kick Panel Area