

CL-FT2

Wiring Harness for Cargo Lighting 2020-2021 Ford Transit Van (Medium/High Roof)

INSTALLATION MANUAL



Thank you for purchasing the **CL-FT2**

Table of Contents

- Page 3** - Tools Required For Installing Additional Accessories
- Page 8** - Wiring Diagram

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (CL-FT2)

COMPATIBLE ACCESSORIES:

- LED Dome Lamp (STL40489-2)
- 1100mm Roof Bow Harness (P-HARRB1)
- 1570mm Roof Bow Harness (P-HARRB2)
- 2570mm Roof Bow Harness (P-HARRB3)
- 3470mm Roof Bow Harness (P-HARRB4)



TOOLS REQUIRED:



1. Diagonal Cutters
2. Phillips #2 Drill Bit
3. Drill



STEP 1:


Remove the plastic covers that cover the OEM wire harnesses on the driver's side of the vehicle.

Note: The recommended method for removing the covers is to slide them off



STEP 2:

Locate the OEM Cargo Lamp connection that is behind the vehicle's first roof bow on the driver's side of the vehicle.

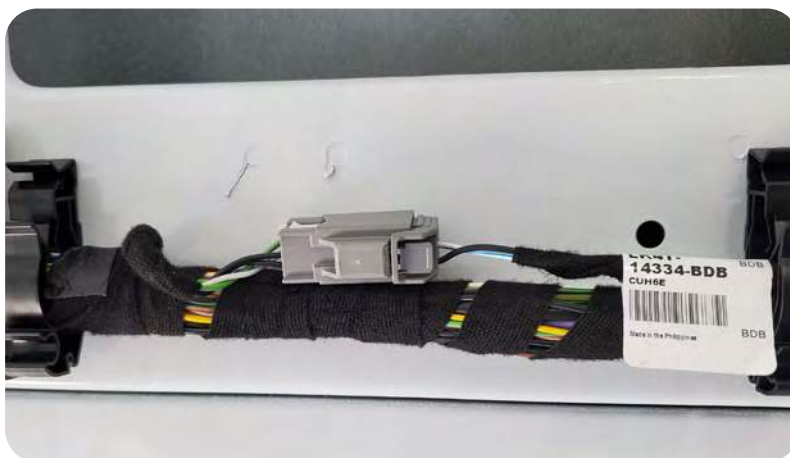

STEP 3:

Unplug the OEM Cargo Lamp connectors and install the CL-FT2 harness between the two connectors.



STEP 4:

Install the STL40489-2 lights onto the center of each roof bow; **leave the light connector exposed**


- Peel the red adhesive liners off of the STL40489-2 and stick the light in place
- Use the provided 3/4" screws to secure the light to the roof rib



STEP 5:

Connect the appropriate P-HARRBx roof bow harness to each installed STL40489-2 light.

- Refer to the diagram on page 8 to confirm proper P-HARRBx for each roof bow

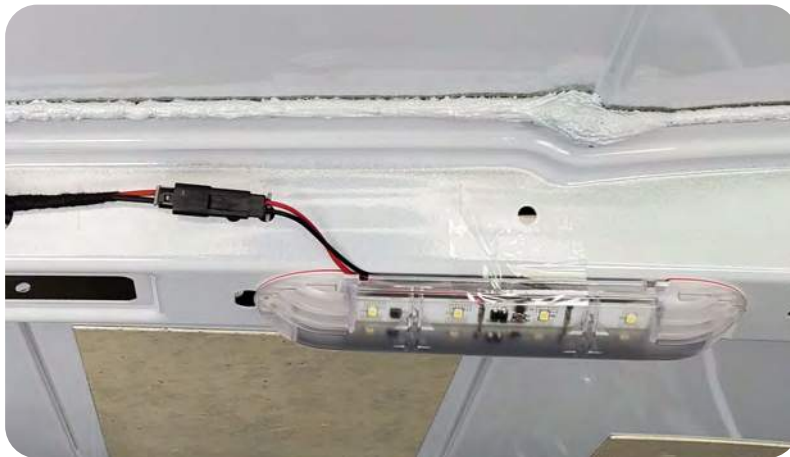

STEP 6:

Use the fir tree cable ties that are packaged with each P-HARRBx to secure the harness to the vehicle's roof bow. Trim off excess cable tie material after harness is secure.



STEP 7:

Route all P-HARRBx roof bow harnesses alongside the OEM wire harnesses.

- Tuck the harnesses into place; behind the black plastic clips






STEP 8:

Plug all installed P-HARRBx harnesses into the mating connectors on the CL-FT2 harness.

- Confirm all installed STL40489-2 lights are operational
- Re-install the plastic covers that go over the OEM wire harnesses



Vehicle	Roof Bow 1	Roof Bow 2	Roof Bow 3	Roof Bow 4
Transit - Med Roof 130" WB	P-HARRB1	P-HARRB2	P-HARRB3	N/A
Transit - Med Roof 148" WB	P-HARRB1	P-HARRB2	P-HARRB3	P-HARRB4
Transit - High Roof (Jumbo)	P-HARRB2	P-HARRB2	P-HARRB3	P-HARRB4

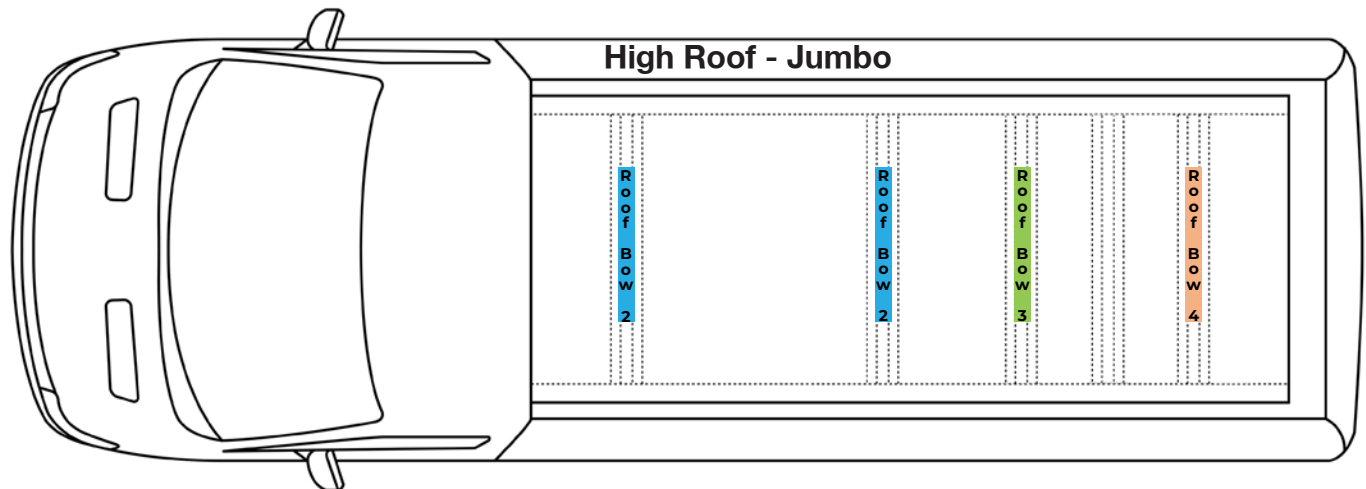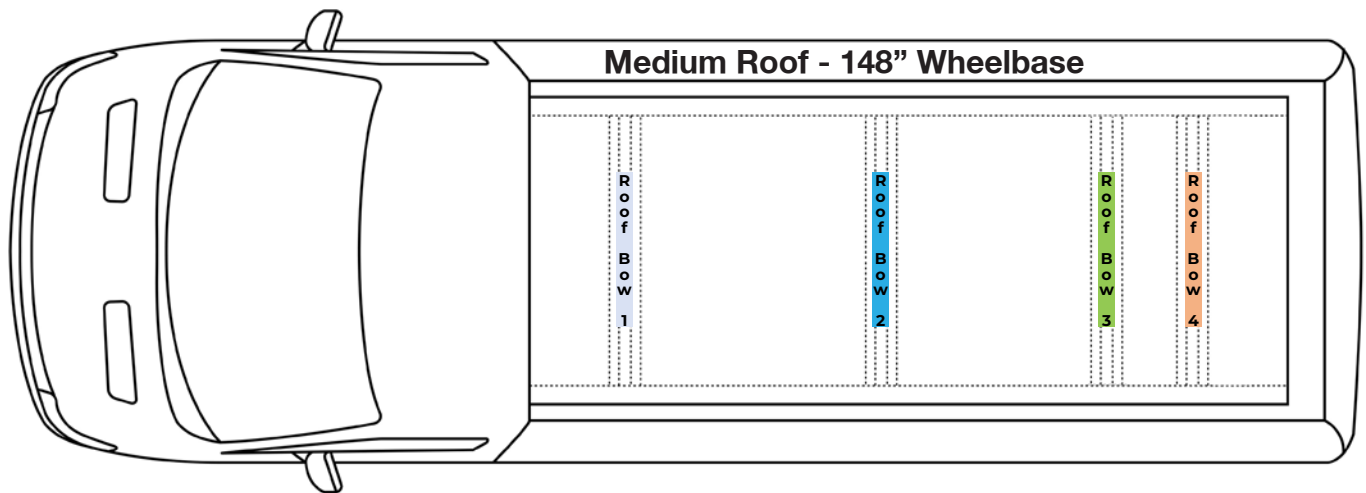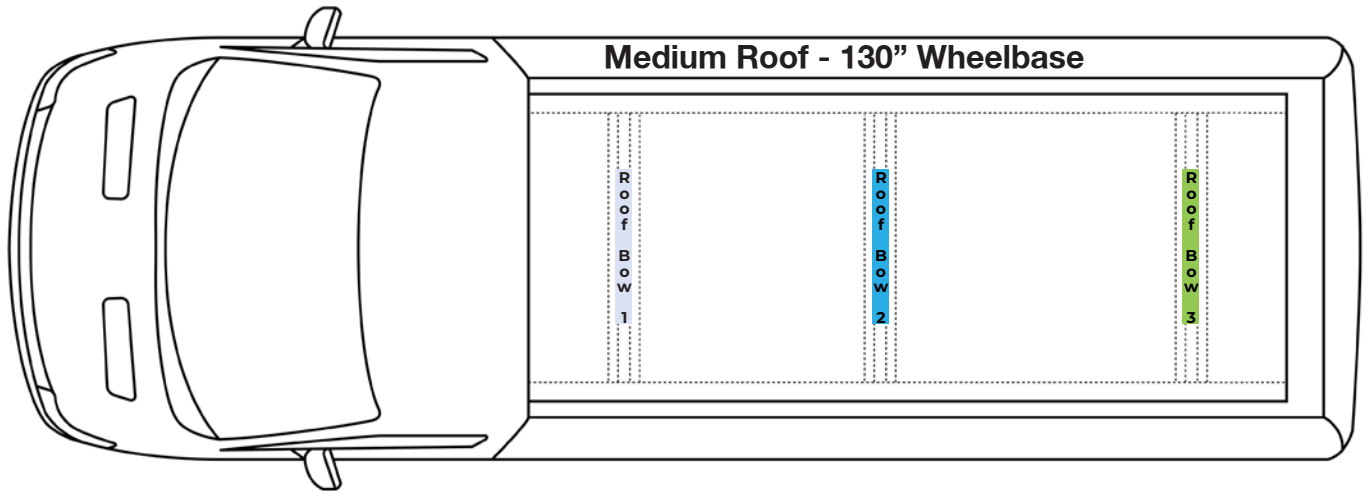



Phone – 866-931-8021 (option 3)

E-Mail – support@echomasterfleetsolutions.com.



EchoMaster Fleet Solutions is a Power Brand of AAMP Global

EchoMaster.com