



P-BUA-COLORADO

**Wiring Harness for Backup Alarm
2016-2021 Chevrolet Colorado**

INSTALLATION MANUAL



Thank you for purchasing the
P-BUA-COLORADO

Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-COLORADO)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
 - 97dB White Noise Backup Alarm (BUA-97WNC)
-

TOOLS REQUIRED:




1. 10mm Nut-setter
 2. Impact Drill
-

STEP 1:

Locate the OEM tail lamp connector that is below the truck's driver side tail lamp

- The connector is accessible from the underside of the truck

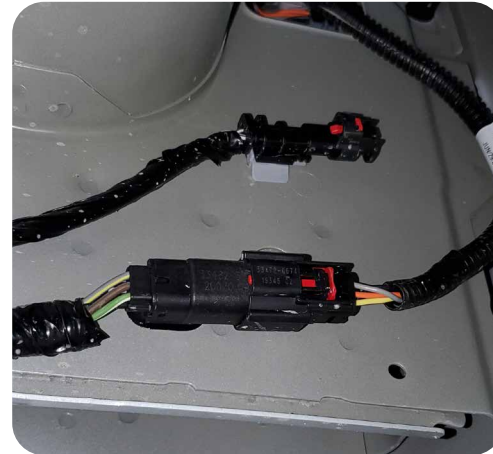

STEP 2:

Unplug the OEM connector



STEP 3:

Install the P-BUA-COLORADO harness between the two OEM connectors



STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the metal surface near the tail lamp connector

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-COLORADO harness

STEP 6:

Enter the Vehicle Settings menu through the driver's information center

- Change the remote entry exterior lighting to "off"
 - This will prevent the backup alarm from sounding when the vehicle is unlocked with the OEM keyless entry transmitter

STEP 7:

Test the backup alarm



Phone: 866.931.8021 (Option 3)
Email: support@aampglobal.com

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com