



P-BUA-EXPRESS

**Wiring Harness for Backup Alarm**  
**2014-2021 Chevrolet Express**

INSTALLATION MANUAL



**ECHOMASTER**  
**PRO**

Thank you for purchasing the  
**P-BUA-EXPRESS**

**Table of Contents**

**Page 3** - Tools Required For Installation

**WHAT'S INCLUDED:**

- Vehicle Specific Wire Harness (P-BUA-EXPRESS)

**COMPATIBLE ACCESSORIES:**

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)

**TOOLS REQUIRED:**



1. 10mm Nut-setter
2. Impact Drill
3. Panel Removal Tool
4. Pry Bar
5. Fish Tape



### STEP 1:

Remove the body grommet that is located beneath the driver side rear corner of the vehicle with a panel removal tool




### STEP 2:

Use a pry bar to push aside the composite material (A.) that is blocking the cavity (B.) behind the grommet

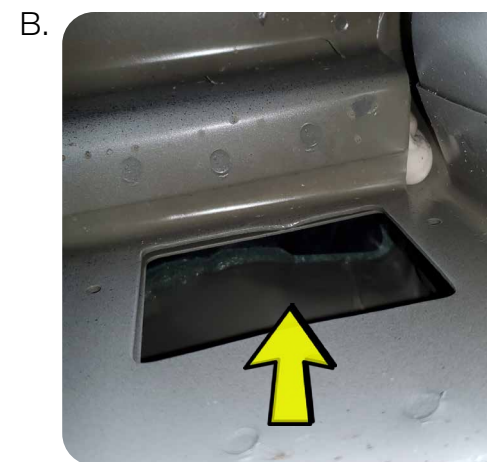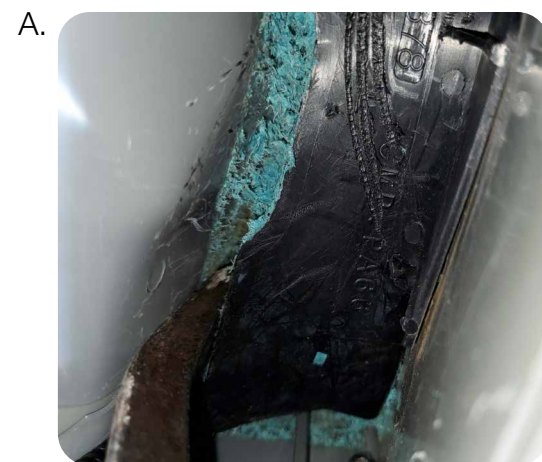

### STEP 3:

Locate the OEM tail lamp connector in the rear corner on the driver side of the vehicle. Unplug the OEM connector and install the P-BUA-EXPRESS harness between the OEM connectors.

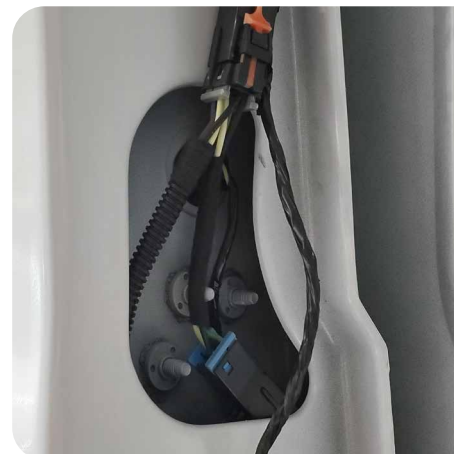


### STEP 4:

Use a fish tape to route the 2 pin connector of the harness down the C-Pillar and through the grommet cavity opening



### STEP 5:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle  
Note: (2) 10mm TEK screws are provided with the compatible backup alarm

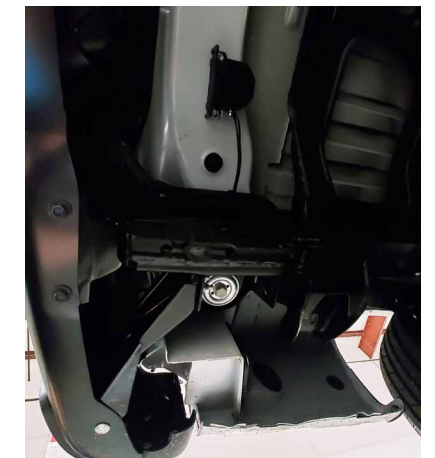

### STEP 6:

Plug the backup alarm connector into the mating connector on the P-BUA-EXPRESS harness and re-install the grommet



### STEP 7:

Test the backup alarm



Phone: 866.931.8021 (Option 3)  
Email: [support@aampglobal.com](mailto:support@aampglobal.com)

EchoMaster is a Power Brand of AAMP Global

[EchoMaster.com](http://EchoMaster.com)