



P-BUA-F150-21

**Wiring Harness for Backup Alarm
2021 Ford F-150**

INSTALLATION MANUAL



Thank you for purchasing the
P-BUA-F150-21

Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-F150-21)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
 - 97dB White Noise Backup Alarm (BUA-97WNC)
-


TOOLS REQUIRED:



1. 10mm Nut-setter
 2. 8mm Nut-setter
 3. Impact Drill
 4. Diagonal Cutters
-

STEP 1:

Use an impact drill and 8mm nut-setter to remove the driver side tail lamp

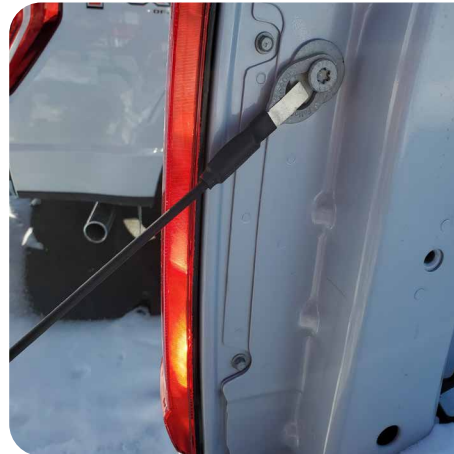

STEP 2:

Unplug the OEM connector and install the P-BUA-F150-21 harness between the OEM connectors



STEP 3:

Route the harness down the tail lamp cavity and re-install the driver side tail lamp



.....

STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-F150-21 harness. Secure any excess wiring with cable ties. Use diagonal cutters to remove excess cable tie material.

STEP 6:

Test the backup alarm

.....



Phone: 866.931.8021 (Option 3)
Email: support@aampglobal.com

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com