



P-BUA-PROMASTER

**Wiring Harness for Backup Alarm  
2018-2021 Ram Promaster**

**INSTALLATION MANUAL**



**ECHOMASTER**  
**PRO**

Thank you for purchasing the  
**P-BUA-PROMASTER**

---

**Table of Contents**

**Page 3** - Tools Required For Installation

---

**WHAT'S INCLUDED:**

- Vehicle Specific Wire Harness (P-BUA-PROMASTER)

---

**COMPATIBLE ACCESSORIES:**

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)

---

**TOOLS REQUIRED:**



1. 10mm Nut-setter
2. #2 Phillips Bit
3. Impact Adapter
4. 17mm Socket
5. Impact Drill


### STEP 1:

Remove the (7) #2 Phillips screws from the black plastic trim panel that covers the Driver side C-pillar cavity and tail lamp connector



### STEP 2:

- Unplug the OEM tail lamp connector
- Remove the (2) 17mm fasteners that hold the tail lamp assembly in place

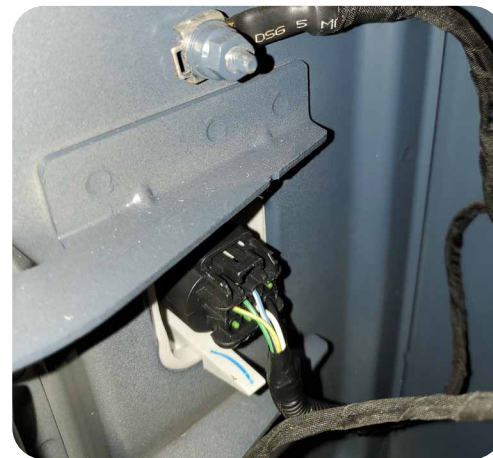

### STEP 3:

Plug the OEM tail lamp connector into the male end of the P-BUA-PROMASTER harness




### STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm behind the tail lamp assembly. The backup alarm should be mounted high, so that it clears the tail lamp assembly when it is re-installed.

Note: (2) 10mm TEK screws are provided with the compatible backup alarm

### STEP 5:

Plug the backup alarm connector into the mating connector on the P-BUA-PROMASTER harness

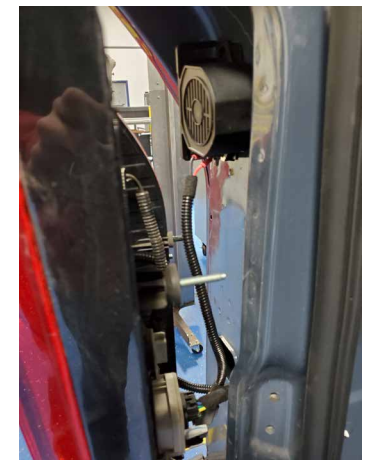

### STEP 6:

- Place any excess harness into the C-pillar cavity
- Re-install the tail lamp assembly
- Re-install the black plastic trim panel

### STEP 7:

Test the backup alarm



Phone: 866.931.8021 (Option 3)  
Email: [support@aampglobal.com](mailto:support@aampglobal.com)

EchoMaster is a Power Brand of AAMP Global

[EchoMaster.com](http://EchoMaster.com)