



**P-BUA-TRANSIT CONNECT**

**Wiring Harness for Backup Alarm  
2014-2021 Ford Transit Connect**

**INSTALLATION MANUAL**



## Thank you for purchasing the **P-BUA-TRANSIT CONNECT**

### Table of Contents

Page 3 - Tools Required For Installation

### WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-TRANSIT CONNECT)

### COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)


### TOOLS REQUIRED:



1. 10mm Nut-setter
2. Impact Drill
3. Panel Removal Tool
4. Fish Tape
5. Knife

### STEP 1:

Locate and disconnect the OEM tail lamp connector that is in the driver side rear corner of the vehicle

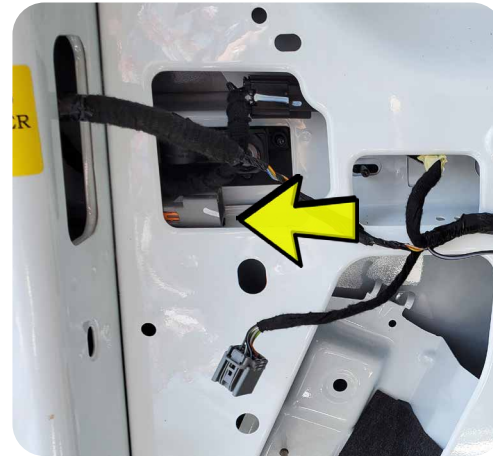

### STEP 2:

Install the P-BUA-TRANSIT CONNECT harness between the OEM connectors



### STEP 3:

Route the harness down the driver side rear corner cavity.



### STEP 4:

Remove the pictured grommet, so that the harness may pass through. Use a fish tape to route the 2 pin connector of the harness down through the bottom of the rear corner cavity and below the vehicle



### STEP 5:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm on the underside of the vehicle  
Note: (2) 10mm TEK screws are provided with the compatible backup alarm



### STEP 6:

Plug the backup alarm connector into the mating connector on the P-BUA-TRANSIT CONNECT harness. Use a knife to make a small cut in the grommet before it is re-installed



### STEP 7:

Test the backup alarm



Phone: 866.931.8021 (Option 3)  
Email: [support@aampglobal.com](mailto:support@aampglobal.com)

EchoMaster is a Power Brand of AAMP Global

[EchoMaster.com](http://EchoMaster.com)