



P-BUA-TRANSIT

Wiring Harness for Backup Alarm 2015-2022 Ford Transit

INSTALLATION MANUAL



Thank you for purchasing the
P-BUA-TRANSIT



Table of Contents

Page 3 - Tools Required For Installation

WHAT'S INCLUDED:

- Vehicle Specific Wire Harness (P-BUA-TRANSIT)

COMPATIBLE ACCESSORIES:

- 97dB Backup Alarm (BUA-97C)
- 97dB White Noise Backup Alarm (BUA-97WNC)



TOOLS REQUIRED:




1. 10mm Nut-setter
2. T-25 Torx Bit
3. Diagonal Cutters
4. Impact Drill



STEP 1:

Remove the (2) T-25 torque fasteners that are holding the tail lamp in place

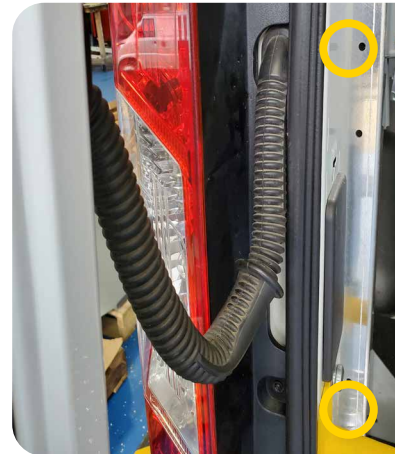

STEP 2:

- Unplug the OEM tail lamp connection
- Install the P-BUA-TRANSIT harness inline between the two OEM tail lamp connectors



STEP 3:

Route the harness down through the bottom of the tail lamp opening, behind the bumper skin, and below the vehicle



.....

STEP 4:

Use an impact drill and 10mm nut-setter to install a compatible backup alarm beneath the driver side rear corner of the vehicle.

Note: (2) 10mm TEK screws are provided with the compatible backup alarm



STEP 5:

Use the provided p-clamps and self tapping screws to secure the harness to the underside of the vehicle



STEP 6:

Plug the backup alarm connector into the mating connector on the P-BUA-TRANSIT harness



STEP 7:

Re-install the tail lamp assembly and test the backup alarm



Phone: 866.931.8021 (Option 3)
Email: support@aampglobal.com

EchoMaster is a Power Brand of AAMP Global

EchoMaster.com